

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

1455 Kleppe Lane ◆Sparks, NV 89431-6467 ◆(775) 359-4712 ◆Fax (775) 359-7424 E-mail: haws@hawsco.com ◆ website: www.hawsco.com

No. 2076860(16)

Model 1435 Drinking Fountain

NOTE TO INSTALLER: Please leave this information with the Maintenance Department.

LIMITED WARRANTY

HAWS warrants that this specific product is guaranteed against defective material or poor workmanship for a period of one year from date of shipment. HAWS liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS Factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first class workmanship, provided that claim is made in writing to Haws within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS will not be liable for the cost of repairs, alterations or replacements, or for any expense connected therewith made by the owner or his agents, except upon written authority from HAWS, Sparks, Nevada. HAWS will not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that HAWS shall not be liable for general, special, or consequential damages claimed to arise under the contract of sale. The drinking fountain manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose for which they were intended.

NO OTHER WARRANTIES EXPRESSED OR IMPLIED ARE AUTHORIZED, PROVIDED OR GIVEN BY HAWS.

SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL PLEASE CALL:

TECHNICAL SUPPORT: 1-800-766-5612

FOR CUSTOMER SERVICE: 1-888-640-4297

RECOMMENDED TOOLS: Hack saw, pipe joint sealant, screwdriver, level, 12" adjustable wrench, 10" pipe wrench, 5/64" and 5/32" hex key wrench, 9/16", 1/2", 7/16" socket wrench or open-end wrench.

LOCATION OF UNIT: When installing this unit, local, state or federal codes should be adhered to. (If height other than shown is required, then dimensions must be adjusted accordingly).

SUPPLY LINE: The minimum recommended line size is 1/2"IPS with 30-90 psi (2-6 ATM) flowing pressure. Where sediment or mineral content is a problem, an inlet filter is recommended.

PLUMBING CONNECTIONS: Inlet is 3/8" O.D. tube fitting. Waste outlet is female 1-1/2" IPS.

MAINTENANCE: Periodically clean the strainer. Refer to 5874SS Valve Manual for more information.

INSTALLATION PROCEDURE

GENERAL NOTES:

- 1. For all plastic push-in type fitting connections, only connect NSF-61 copper or plastic tubing. Stainless steel or glass tubing is not recommended. The following assembly instructions must be followed to ensure a watertight connection:
 - a. Cut tubing square and clean.
 - b. Mark from end of tube the length of insertion (See table below).
 - c. Push tube into the fitting until it bottoms out.
 - d. To remove, depress collet and pull tubing out.

Tube Sizes	O.D. Tolerance	Insertion Depth	
1/4"	±.005"	11/16"	
3/8"	±.005"	3/4"	
1/2"	±.005"	7/8"	

Refer to Installation Drawing (Page 5 and 6 of 6) for mounting. For assembly steps below refer to exploded view in Parts Breakdown Drawing (Page 4 of 6).

- STEP 1: Remove nut and washers from bubbler heads. Install bubbler heads through receptor. Install respectively rubber washer, fiber washer, then nut onto bubbler shank. Securely tighten nut.
- Remove push button assembly from 5874SS valves with spanner wrench provided. Be sure to also remove (chrome plated) ring nut and (chrome plated) washer from valves. At this point, carefully follow installation instructions shown on page 5 of 5 of 5874SS Valve/Push Button Operation and Maintenance Manual under heading: "INSTALLATION INSTRUCTIONS FOR 5874SS W/PBA7"

INSTALLATION PROCEDURE

- STEP 3: Make tubing connections from bubbler to the outlet side of control valve (Refer to installation drawing Page 6 of 6). Follow instructions for tubing preparation, and insertion depths from Step 3.
- STEP 4: Place strainer into receptor (using putty), secure in place using a fibre washer and lock nut.
- STEP 5: 1. Attach mounting brackets to wall using 3/8-16 mounting hardware (not supplied); **Hand tighten only** at this point.
 - 2. Align bowl over brackets such that bowl alignment tabs slide into slots at tops of brackets and bottom bowl tabs slide between or around brackets.
 - 3. Adjust brackets as needed to align bracket slots with bowl bottom tab holes and attach bowl to brackets using (1) 1/4-20 screw, (2) 1/4 ID Fender washers, (1) 1/4-20 hex nut per bracket. Insert mounting hardware such that screw heads cover holes in bowl bottom tabs, and Fender washers & nuts cover bracket slots; **Hand tighten only** at this point.
 - 4. Level bowl and **fully tighten** all mounting hardware such that bowl does not move when rocked up and down, nor move away from wall when pulled on.
- STEP 6: Flush supply line to clear debris. Connect to a 1/2" IPS supply line and tighten.
- STEP 7: Connect waste trap (supplied) to 1-1/2" IPS waste pipe (not supplied).
- **STEP 8:** Completely open the screwdriver stop (not supplied) and check for leaks.
- STEP 9: Adjust valves for desired flow height. See 5874SS Valve Manual (supplied).
- **STEP 10:** Attach bottom plate to fountain using #10-24 hardware provided.

	TROUBLESHOOTING			
PROBLEM			REPAIR CHECKLIST	
1.	Insufficient bubbler flow.	1a. b.	Check that inlet screwdriver stop valve is in wide-open position. Verify minimum 30 psi flowing supply pressure.	
		C.	Clean strainer. See 5874SS Valve Manual.	
		d.	Adjust valve to increase flow. Use front adjust screw or see 5874SS Valve Manual.	

For more information about Haws products, see our website: www.hawsco.com

© 2012 Haws[®] Corporation – All Rights Reserved HAWS[®] and other trademarks used in these materials are the exclusive property of Haws Corporation.

11/12 Model 1435 Page 3 of 6

1 REFER TO 5874SS/VRK5874 OPERATION AND MAINTENANCE MANUAL FOR INSTALLATION INSTRUCTIONS.

PARTS BREAKDOWN


- MUST APPLY 1 DOT OF LOCTITE 222MS THREAD-LOCKER ON FEMALE THREADS OF PUSH BUTTON. SEE 5874SS OPERATION AND MAINTENANCE MANUAL (PAGE 5 OF 5) FOR PROPER APPLICATION
- 3. FOR TUBING ROUTING AND LENGTHS SEE SHEET 2 OF INSTALLATION DRAWING.

DRIVER, NOZZLE .25 HEX PN 0002082253 (OPTIONAL) FOR REMOVAL OF NOZZLE WITH TUBE

12 PUSH BUTTON ASSY PBA7, 3 PLACES

3 PLACES

ROTATED 90° CCW DETAIL OF 5703M

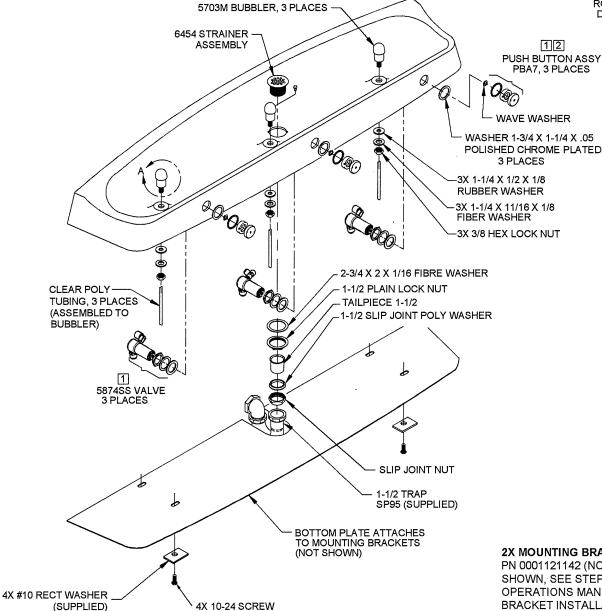

2X MOUNTING BRACKETS PN 0001121142 (NOT SHOWN, SEE STEP 6 OF OPERATIONS MANUAL FOR BRACKET INSTALLATION)

SPANNER WRENCH P/N 0006983506

Haws MODEL(S)


1455 KLEPPE LANE SPARKS, NEVADA 89431 (775) 359-4712 FAX (755) 359-7424 E-MAIL: HAWS@HÀWSCO.COM WEBSITE: WWW.HAWSCO.COM

0002076860 DRAWING NO. REV 12797C00 16

WHEN ORDERING PARTS PLEASE SPECIFY MODEL NUMBER.

1435 THREE BUBBLER FOUNTAIN

(SUPPLIED)

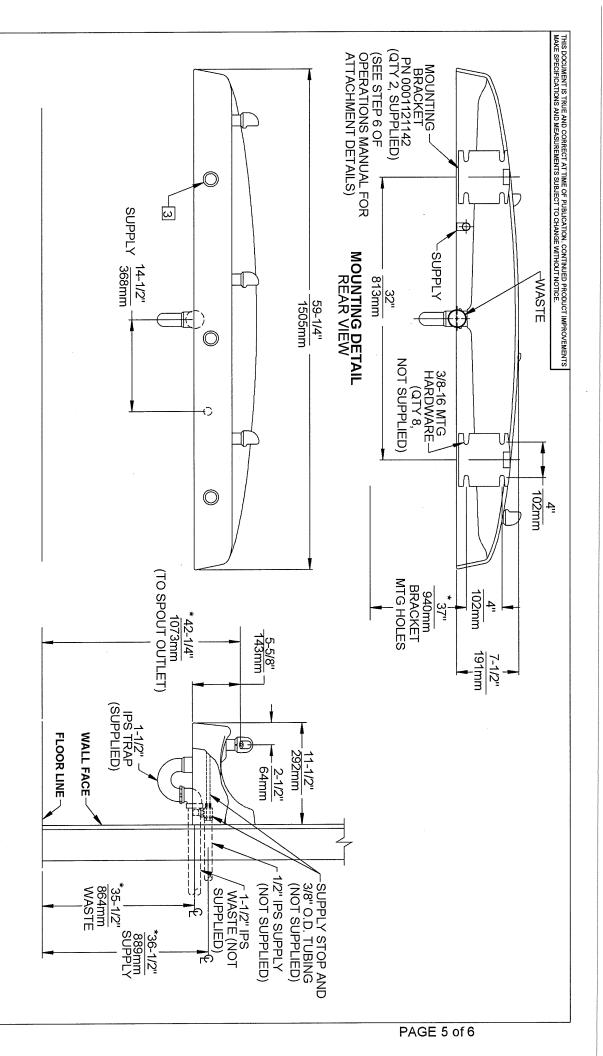

NOTES:

- 1. ROUGH-IN DIMENSIONS MAY VARY ±1/4" (6.4mm)
- 2. WHEN INSTALLING THIS UNIT LOCAL, STATE OR FEDERAL CODES SHOULD BE ADHERED TO. FOR INSTALLATION HEIGHTS OTHER THAN SHOWN, DIMENSIONS MARKED (*) MUST BE ADJUSTED ACCORDINGLY.
- [3] REFER TO 5874SS/VRK5874 OPERATION AND MAINTENANCE MANUAL FOR PUSH BUTTON AND VALVE INSTALLATION/MAINTENANCE INSTRUCTIONS.

(NOTES CONTINUED ON SHEET 2 OF 2)

©2012 Haws Corporation - All Rights Reserved. HAWS® and other trademarks used in these materials are the exclusive property of Haws Corporation.

12 SCALE: 1:11 DRAWING TYPE

1435
THREE BUBBLER FOUNTAIN
DRAWING TYPE:


1455 KLEPPE LANE
SPARKS, NEVADA 89431
(775) 359-4712 FAX (755) 359-7424
E-MAIL: HAWS@HAWSCO.COM
WEBSITE: WWW.HAWSCO.COM

PART NUMBER 0002076860.D

MODEL(S)

NOTES: (CONTINUED)

- 4. CONNECT WHITE "POLYPROPYLENE" TUBING ON PRESSURE SIDE (INLET) OF VALVE.
- Ò

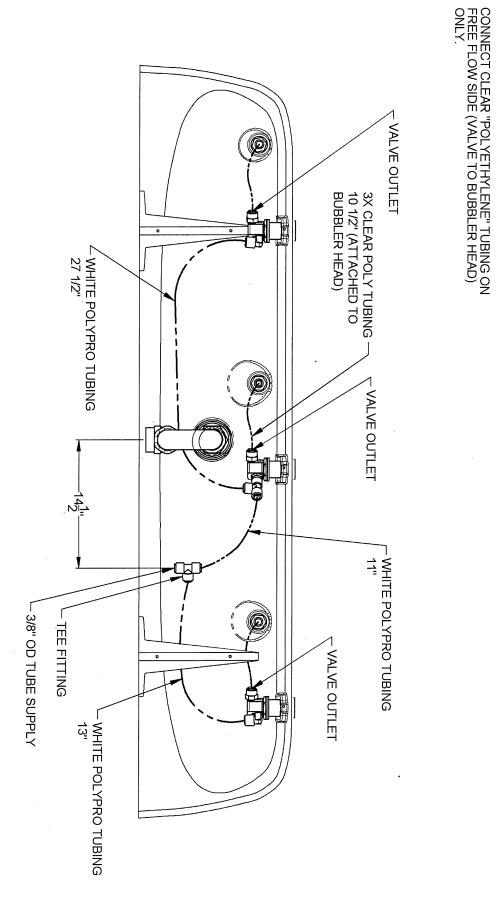

MODEL(S)

1455 KLEPPE LANE
SPARKS, NEVADA 89431
(775) 359-4712 FAX (755) 359-7424
E-MAIL: HAWS@HAWSCO.COM
WEBSITE: WWW.HAWSCO.COM

THREE BUBBLER FOUNTAIN

TUBING ROUTING DETAIL

BOTTOM VIEW