



NOTES:

- 1 REFER TO 5874/VRK5874 OPERATION AND MAINTENANCE MANUAL FOR PUSH BUTTON AND VALVE INSTALLATION/MAINTENANCE INSTRUCTIONS.
- 2 SPACER IS GLUED TO WALL OF PEDESTAL, BUT MAY BE KNOCKED OFF DURING WASTE ARM ASSEMBLY REMOVAL/REPAIR. ENSURE THAT SPACER IS REPLACED TO KEEP HOSE AND WASTE ARM ALIGNED PROPERLY.



1455 KLEPPE LANE  
 SPARKS, NEVADA 89431  
 (775) 359-4712 FAX (755) 359-7424  
 E-MAIL: HAWS@HAWSCO.COM  
 WEBSITE: WWW.HAWSCO.COM

ECN NO. REVISED PER BY:	ECN: 4948	HM	MODEL(S)	3177	PART NUMBER
DRAWN:	DATE:	CHKD.:			0002077324.D
8TH	06/95				DRAWING NO. REV
APPROVED:	DATE:				12018A00 14
			SCALE: 1:13	DRAWING TYPE: INSTALLATION	SIZE: A SHEET 1 OF 1