





- 1. ENSURE ELECTRICAL POWER IS OFF AND POWER MATCHES VOLTAGE, PHASE AND CYCLE LISTED ON CHILLER LABEL.
- 2. REMOVE FRONT PANEL TO GAIN ACCESS TO INTERNAL JUNCTION BOX.
- 3. HARDWIRE CHILLER THROUGH ITS SIDE.
 WIRE IN ACCORDANCE WITH LOCAL, STATE OR
 FEDERAL ELECTRICAL CODES.
- 4. REPLACE FRONT PANEL. <u>DO NOT</u> APPLY POWER UNTIL WATER SUPPLY IS CONNECTED AND ON.


MOUNTING FRAME INSTALLATION

- THIS FRAME IS USED WITH SEVERAL DIFFERENT MODELS. SEE INSTALLATION INSTRUCTIONS
 RECEIVED WITH THE FOUNTAIN FOR PROPER LOCATIONS OF 5/16-18 PANEL NUT RETAINERS.
 FOR ROUGH-IN USE THE APPROPRIATE DIMENSIONS SHOWN ABOVE. WASTE AND SUPPLY
 HEIGHTS ARE ALSO DETAILED ON THE FOUNTAIN INSTALLATION INSTRUCTIONS.
- 2. HOLD ROUGH-IN DIMENSIONS $\pm 1/8$ " (3.2mm).
- 3. WHEN INSTALLING THIS UNIT LOCAL, STATE OR FEDERAL CODES SHOULD BE ADHERED TO. FOR DIFFERENT INSTALLATION HEIGHTS OTHER THAN SHOWN, DIMENSIONS MARKED (*) MUST BE ADJUSTED ACCORDINGLY.
- 4 ALIGN HOLES IN CHILLER SUPPORT TRAY WITH HOLES IN FRAME AND FASTEN IN PLACE WITH #10 SHEET-METAL SCREWS SUPPLIED WITH UNIT.
- 5 FOUNTAIN REMOVAL: FIRST REMOVE SCREWS AND THEN SQUEEZE CLIPS ON NUT RETAINER TO POP OUT. INSTALL IS REVERSE OF REMOVAL.

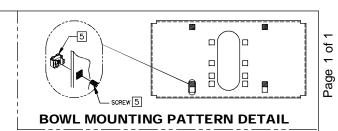

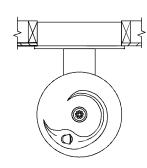

* IF YOUR FOUNTAIN IS THIS STYLE USE THESE DIMENSIONS	
Α	В
1-3/8" (35mm)	4-7/8" (124mm)

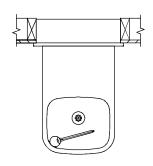

* IF YOUR FOUNTAIN IS THIS STYLE USE THESE DIMENSIONS	
Α	В
1-3/16" (30mm)	4-11/16" (119mm)



INFO FAX: 1-888-FAX-HAWS (1-888-329-4297)
1455 Kleppe Ln, Sparks NV, 89431
Phone: 775-359-4712 Fax: 775-359-7424
Haws Ag Bachweg 3 CH-3401 Burgdorf Switzerland
Haws Mfg Pte Ltd 74 Sungei Kadut Loop Singapore 729531
e-mail: Haws@haysoc.com website: www.hawsco.com

COR NO.	REVISED PER	BY	CON: 4181	VWC		
DRAWN:	DATE:	DATE:	DATE:	DATE:	ITE	DRAWNOR TYPE: INSTALLATION/FAXBACK
DATE:	DATE:	DATE:	DRAWNOR DAWNOR TYPE: INSTALLATION/FAXBACK			
DATE:	DATE:	DRAWNOR DAWNOR DAWNOR TYPE: INSTALLATION/FAXBACK				
DATE:	DATE:	DRAWNOR DAWNOR TYPE: INSTALLATION/FAXBACK				
DATE:	DATE:	DRAWNOR DAWNOR TYPE: INSTALLATION/FAXBACK				
DATE:	DRAWNOR DAWNOR TYPE: INSTALLATION/FAXBACK					
DATE:	DRAWNOR DAWNOR TYPE: INSTALLATION/FAXBACK					
DATE:	DRAWNOR TYPE: INSTALLATION/FAXBACK					
DATE:	DRAWNOR DAWNOR TYPE: INSTALLATION/FAXBACK					
DATE:	DATE:	DRAWNOR TYPE: INSTALLATION/FAXBACK				
DATE:	DA					